


EMFB20BG

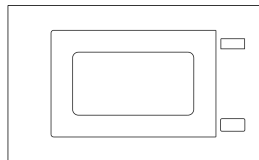

Build-in microwave

微波爐【嵌入式】

Installation & User manual


使用及安裝說明書

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,
safety notices and shop for accessories.

1. **Open the camera app on your smartphone and point at the QR code to scan.**

Product Registration QR code is located on the front of your appliance.

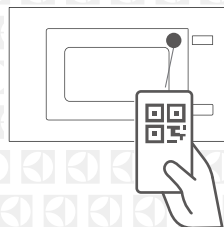

2. **Tap the notification or link to open the registration form.**
3. **Complete your details and enjoy peace of mind.**



Electrolux

CONTENT

CONTENT	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	2
IMPORTANT SAFETY INSTRUCTIONS	2
INSTALLATION GUIDE	5
GROUNDING INSTRUCTIONS	8
RADIO INTERFERENCE	8
BEFORE CALLING FOR SERVICE	9
COOKING TECHNIQUES	9
COOKING UTENSILS GUIDE	9
SPECIFICATIONS	10
PRODUCT DIAGRAM	10
CONTROL PANEL	11
OPERATION INSTRUCTIONS	12
Setting the clock	12
Microwave cooking	13
Express cooking	13
Grill	13
Microwave+grill	14
Time defrost	14
Weight defrost	14
Save function	14
Power saving function	15
Child lock	15
Turntable reset function	15
Auto cook	15
CLEANING AND CARE	17

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in

a safe way and understands the hazards of improper use.

6. **WARNING!**--When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated
7. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
8. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This Microwave complies with EN 55011/CISPR 11, in this standard it belong to Class B Group 2 classification. Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400

GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of electromagnetic energy. Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be avoid .
22. The microwave oven should not be placed in the cabinet other than designated by the manufacturer.
23. The door or the outer surface may get hot when the appliance is operating.
24. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid pressing heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The that appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing

the power cord or the lighting as well. Send the appliance in these cases to our service centre.

34. The microwave oven is intended for defrosting, cooking and steaming of food only.
35. Use gloves if you remove any heated food.
36. Caution! Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.


INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.
9. Installation height must be greater than 850mm.

20L Built in Microwave Oven


Installation Instructions

Sequence	Name	Quantity
Ⓐ	Screw 3*25mm	4
Ⓑ	Sticker 15*20mm	2

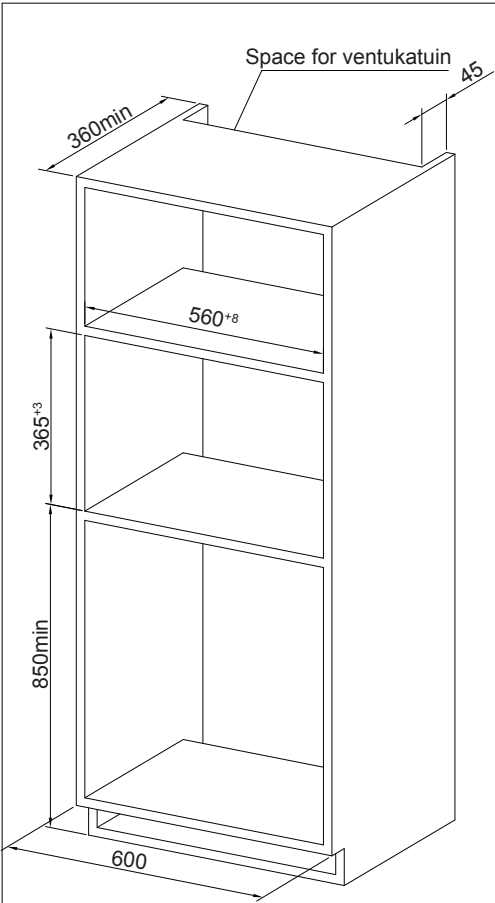


Made a cabinet by the dimension.

1

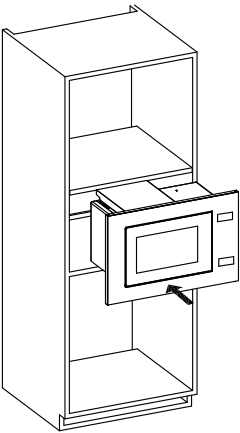


Place the Microwave Oven into cabinet.

2

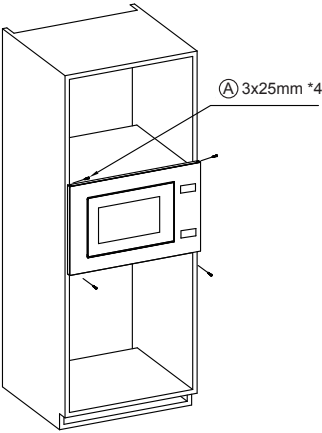


Fasten the oven into the cabinet with 4 screws.

3

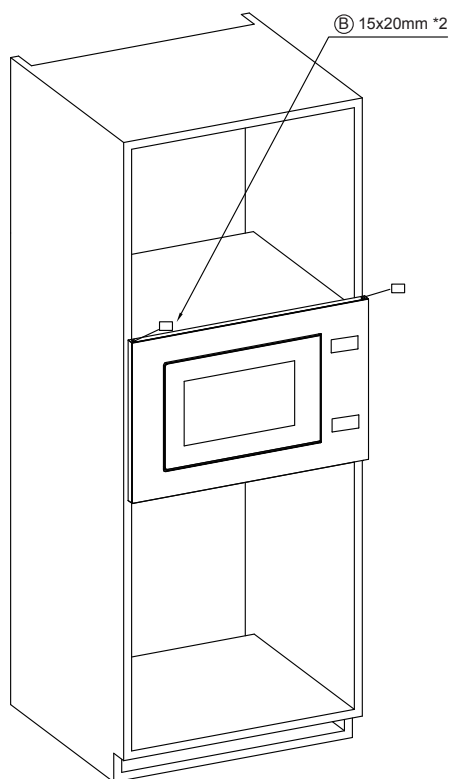

Stick the sticker onto the hole where the installation screws are located.

4

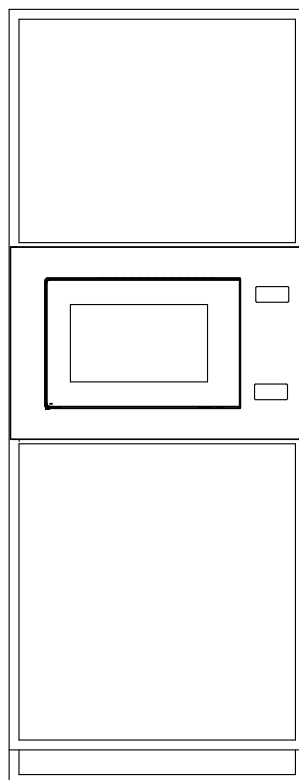

Place the oven in the middle of cabinet.

5

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING!--Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.

- Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
- Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.


COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No

SPECIFICATIONS


Power Consumption:	220V~50Hz, 1300W(Microwave)
	1050W(Grill)
Rated Microwave Power Output:	800W
Operation Frequency:	2450MHZ
Outside Dimensions:	390mm(H)×595mm(W)×348mm(D)
Oven Cavity Dimensions:	177mm(H)×315mm(W)×334mm(D)
Oven Capacity:	20Litres
Net Weight:	Approx.13.2kg

PRODUCT DIAGRAM

- Door Safety Lock System
- Oven Window
- Roller Ring
- Shaft
- Door Release Button
- Control Panel
- Wave Guide (Please do not remove the mica plate covering the wave guide)
- Glass Tray
- Grill Heater
- Metal Rack

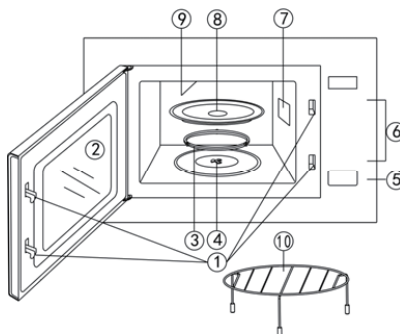

CONTROL PANEL

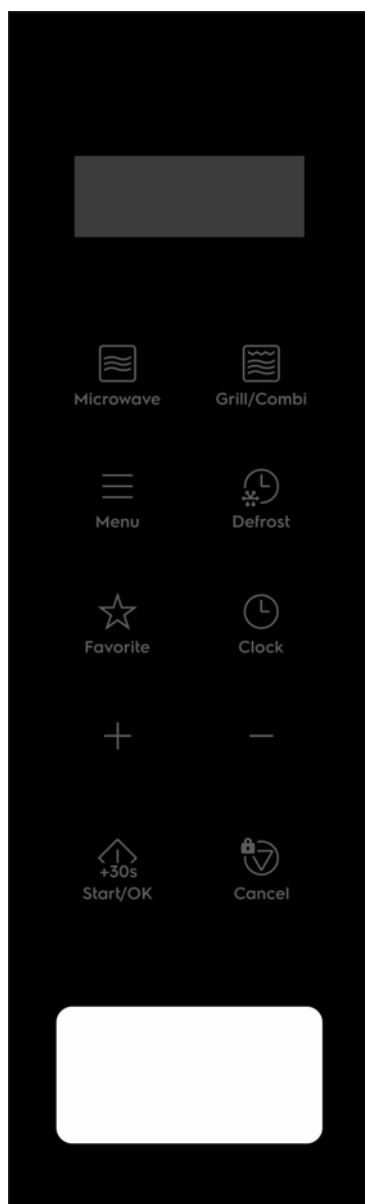

● DISPLAY SCREEN

Time, power and indicators are displayed.

● MICROWAVE

Press to select microwave cooking power level.

● GRILL/COMBI.

Press to set grill cooking program.

Press to set microwave and grill combination cooking program.

● MENU

Press to select auto cooking menus.

● DEFROST

Press once to defrost food baesd on time.

Press twice to defrost food baesd on weight.

● FAVORITE

Press to save programs.

● CLOCK

Press to set clock time.

● +/-

Press to set time, food weight or servings.

● START/OK

Press to start cooking programs.

Simply press it a number of times to set cooking time and cook immediately at full power level.

● CANCEL

Press once to temporarily stop cooking or twice to cancel cooking programs.

Press to set power saving function. It is also used to set child lock.

OPERATION INSTRUCTIONS

- When the oven is plugged in, a beep will sound and the display will show "1:01" (":" flashing).
- During setting, the system will return to standby mode if there is not any operation in 30 seconds.
- During cooking, if press CANCEL button once, the program will be paused, then press START/OK button to resume. But if press CANCEL button twice, the program will be cancelled.
- After cooking ends, the display will show End and 4 beeps will sound until user press CANCEL button or open the door. The system will return to standby mode if there is no operation for 2 minutes.
- In the process of operation, press a valid button, the buzzer rings once, but if press a invalid button, the buzzer rings twice.
- During setting, you can adjust parameters quickly by pressing and holding +/- buttons.
- In standby mode, if there is no operation for 1 minute, the brightness of the display screen will decrease automatically. After opening or closing the door or pressing any button, the brightness of the display screen will return to normal.

SETTING THE CLOCK

This is a 12- or 24- hour clock. You can choose to set the clock time in 12- or 24- hour cycle by pressing CLOCK button.

1. In standby mode, press CLOCK button repeatedly to choose 12- or 24- hour clock.
2. Press +/- buttons to set hour digit.
3. Press CLOCK or START/OK button once.
4. Press +/- buttons to set minute digit.
5. Press CLOCK or START/OK button to confirm.

NOTE: During cooking, you can check the current clock time by pressing CLOCK button.

MICROWAVE COOKING

1. In standby mode, press MICROWAVE button repeatedly to select cooking power level.
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press START/OK button to confirm.

Press MICROWAVE button to select power level:

Press MICROWAVE button	Power (Display)	Press MICROWAVE button	Power (Display)
Once	100% (P100)	6 times	50% (P-50)
Twice	90% (P-90)	7 times	40% (P-40)
3 times	80% (P-80)	8 times	30% (P-30)
4 times	70% (P-70)	9 times	20% (P-20)
5 times	60% (P-60)	10 times	10% (P-10)

NOTE: During cooking, you can check the cooking power level by pressing MICROWAVE button. If you want to cook at full power level, omit the first step.

EXPRESS COOKING

Use this feature to program the oven to start at 100% power conveniently. In standby mode, press START/OK button repeatedly to set the cooking time (each press to increase 30 seconds, and up to 95 minutes). The oven starts cooking automatically at full power.

NOTE: During cooking (except time defrost, weight defrost and auto cook menus), you can add cooking time by pressing START/OK button.

GRILL

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

1. In standby mode, press GRILL/COMBI. button once.
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press START/OK button to confirm.

NOTE: During cooking, you can check the cooking mode by pressing GRILL/COMBI. button.

MICROWAVE+GRILL

Combination 1: 30% of whole time for microwave cooking and 70% for grill cooking in one cycle. Use for cooking fish or au gratin.

Combination 2: 55% of whole time for microwave cooking, 45% for grill cooking. Use for cooking pudding, omelets, baked potatoes and poultry.

1. In standby mode, press GRILL/COMBI. button twice or 3 times to select "Co-1" or "Co-2".
2. Press +/- buttons to set cooking time. The longest time is 95 minutes.
3. Press START/OK button to confirm.

NOTE: During cooking, you can check the cooking mode by pressing GRILL/COMBI. button.

TIME DEFROST

1. In standby mode, press DEFROST button once.
2. Press +/- buttons to set defrosting time.
3. Press START/OK button to confirm.

NOTE: During defrosting, the system will pause and 3 beeps will sound to remind you to turn food over, and then press START/OK button to resume.

WEIGHT DEFROST

The defrosting time and power level are automatically set once the food is programmed. The frozen food weight ranges from 100 g to 1800 g.

1. In standby mode, press DEFROST button twice.
2. Press +/- buttons to select food weight.
3. Press START/OK button to confirm.

NOTE: During defrosting, the system will pause and 3 beeps will sound to remind you to turn food over, and then press START/OK button to resume.

SAVE FUNCTION

To store: After setting up cooking program, press and hold FAVORITE button for 3 seconds, the display will shows "-- --" for 3 seconds. The program has been saved..

To start: In standby mode, press FAVORITE button once. Then press START/OK button to start.

NOTE: This feature only saves one cooking program and has power-off memory.

POWER SAVING FUNCTION

To set: In standby mode, press CANCEL button once, a beep will sound and the display will go off. The system has entered power saving mode.

To cancel: In power saving mode, the power saving function can be cancelled by opening and closing the door once or pressing any button once.

CHILD LOCK

Use to prevent unsupervised operation of the oven by children.

To enter child lock: In standby mode, pressing and holding CANCEL button for 3 seconds, a beep will sound and the display will show "Loc" for 3 seconds, the oven will auto enter child lock mode, In the lock state, all buttons are disabled.

To cancel: In child lock mode, pressing and holding CANCEL button for 3 seconds to cancel the program.

TURNTABLE RESET FUNCTION

You can use this function to reset the utensil to its original position in the oven after working. It's easy for you to take the food out of the oven. The default turntable reset function is on.

Note:

- 1) This function is valid for a complete cooking. If you press "Cancel" and open or close the oven door during cooking, this function is invalid.
- 2) If you open the oven door or press "Cancel" during resetting turntable process, the oven will turn to standby mode.
- 3) If the cooking time is within 5 minutes, the accuracy of the turntable is within 30 degrees.
- 4) When the cooking process is completed, the turntable reset function is activated. At this time, the screen will display "[_ _]".

AUTO COOK

For the following food or cooking mode, it is not necessary to program the cooking time and power. It is sufficient to indicate the type of food that you want to cook as well as the weight or servings of the food.

1. In standby mode, press MENU button repeatedly to select food code.
2. Press +/- buttons to select food weight or servings.
3. Press START/OK button to start.

Auto cook menus:

Code	Food	Weight/Share	Display	Note
A-01	"Milk/Coffee (200ml/cup)"	1cup	1	• For Chicken, Beef/Mutton and Skewered Meat, during cooking, the system will pause to remind you to turn food over, and then press START/OK button to resume. • The result of auto cooking depends on factors such as fluctuation of voltage, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
		2cups	2	
		3cups	3	
A-02	"Rice (rice:water =1.6~1.8)"	150g	150	
		300g	300	
		450g	450	
		600g	600	
A-03	Spaghetti	100g	100	
		200g	200	
		300g	300	
A-04	Potato (230±10g/per)	1	1	
		2	2	
A-05	Auto Reheat	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
		700g	700	
		800g	800	
A-06	Fish	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
A-07	Chicken	800g	800	
		1000g	1000	
		1200g	1200	
		1400g	1400	
A-08	Beef/Mutton	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
A-09	Skewered Meat	100g	100	
		200g	200	
		300g	300	
		400g	400	
		500g	500	

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

Consumers care contact center

Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com	Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com
Indonesia Layanan langsung: 08041119999 Electrolux Indonesia Jl. Tanah Abang II No.42, Petojo Selatan Kecamatan Gambir, Kota Jakarta Pusat, Daerah Khusus Ibukota Jakarta 10160, Indonesia Email: customercare@electrolux.co.id SMS & WA : 0812.8088.8863	Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com
Vietnam Consumer Care Center Toll Free: 1800 588 899 Electrolux Vietnam Ltd Address: Unit 1,2, Floor 10, Sofic Tower, 10 Mai Chi Tho, An Khanh Ward, HCM city, Vietnam Office Tel : (+84 28) 3910 5465 Email: vncare@electrolux.com	Singapore Consumer Care Centre, Tel : (+65) 67273699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com
HONG KONG SERVICE HOTLINE: (+852) 3193 9888 DCH ELECTRICAL APPLIANCES SERVICE CENTRE 4/F, DCH BUILDING, 20 KAI CHEUNG ROAD, KOWLOON BAY, HONG KONG EMAIL: customercare@dch.com.hk WEBSITE: www.electrolux.com.hk	

RoHS
Compliant

**Conformed to the stipulation on permissible content limitation of some hazardous & restricted chemical substances.
(RoHS compliant)
(According to the Circular No. 30/2011/TT-BCT, Vietnam, dated 10th August, 2011)**

重要的安全說明


請仔細閱讀並妥善保管以供將來參考

20L嵌入式微波爐安裝說明


請確認櫥櫃的尺寸是否滿足安裝間隔的要求。

微波爐單獨安裝時，最少安裝距離如下圖中顯示。


順序	名稱	數量
①	螺釘 3*25mm	4
②	防塵貼 15*20mm	2

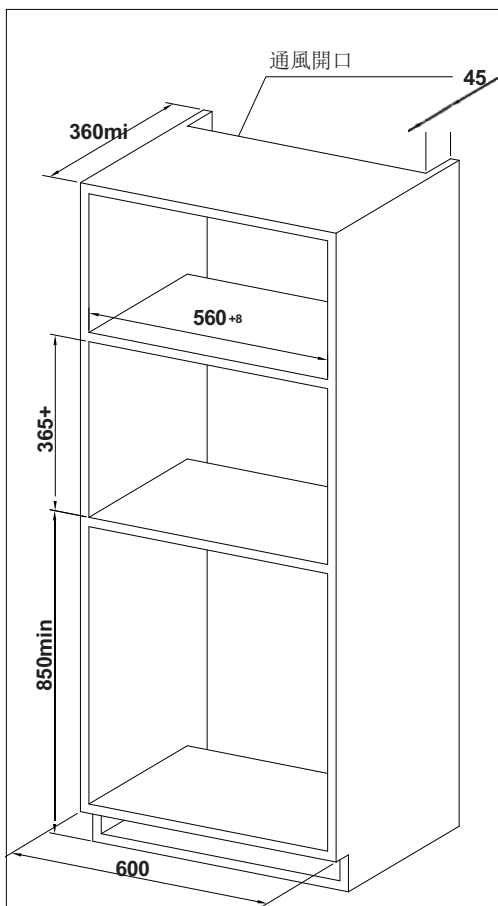


1. 根據圖示尺寸製作櫥櫃

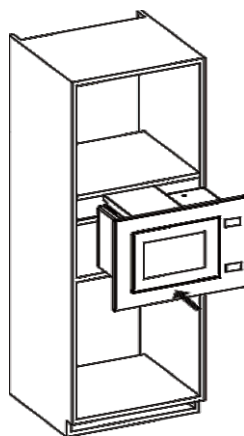

2. 將微波爐放入櫥櫃中

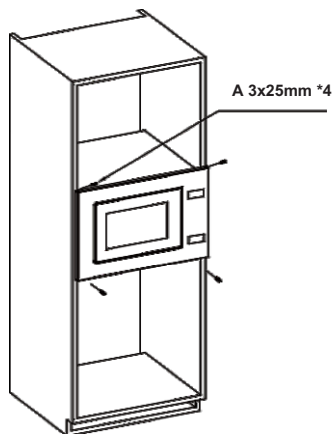

3. 用 4 顆螺絲將烤箱固定在櫥櫃

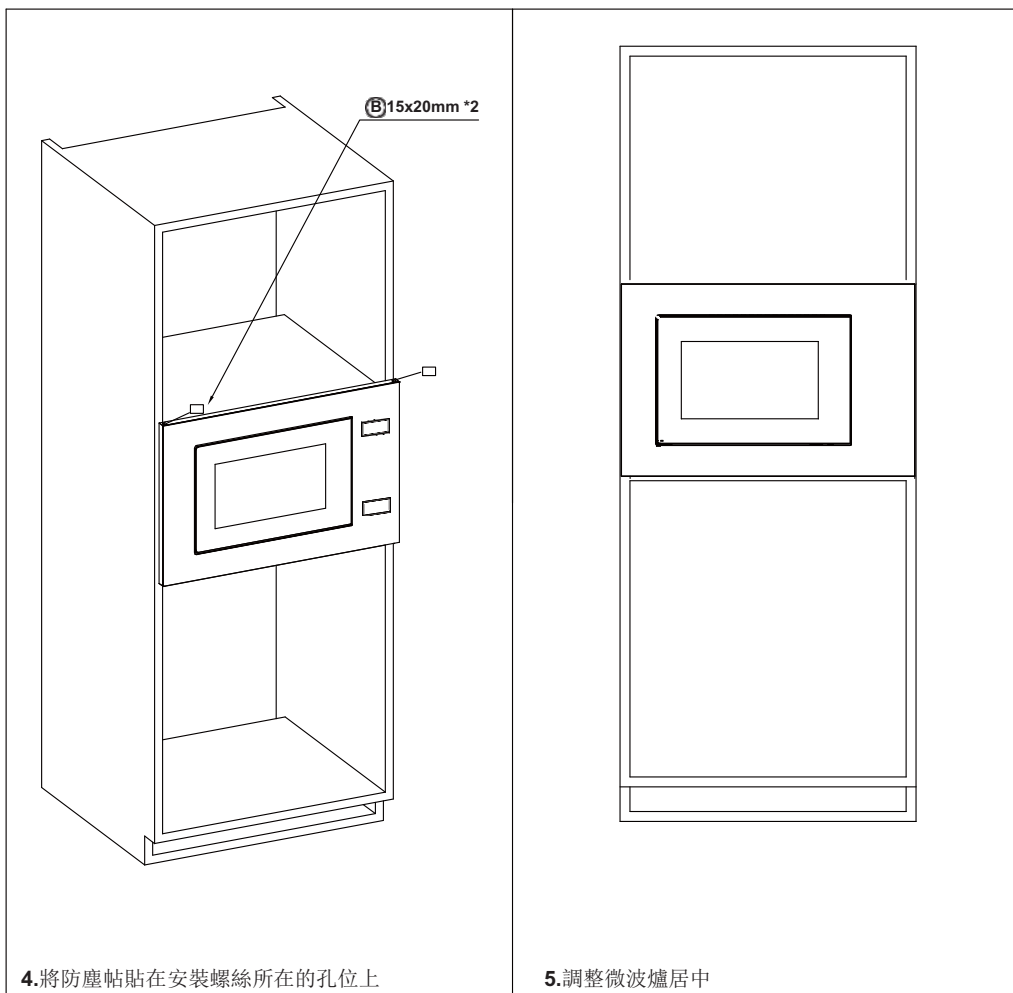

目錄

安裝頁	1
目錄	3
避免微波能量外洩的安全措施	4
安全使用要點	4
安裝	6
無線電干擾	7
微波爐烹調規則	7
接地指示	7
拔電尋求援助服務之前應做事項	8
器皿指南	9
規格	9
組件名稱	10
控制台說明	11
操作方法	12
時鐘設置	12
+30秒功能設置	12
微波烹調	12
按時解凍	13
重量解凍	13
燒烤	13
組合烹調	13
常用程式	14
省電功能	14
童鎖功能	14
轉盤復位功能	15
自動功能表烹調	16
清潔與保養	17
故障指南	18
消費者服務中心	19

避免微波能量外洩的安全措施

1. 切勿在爐門開啟的情況下操作，以避免有害微波能量外洩。切勿擅自改動或安裝安全鎖裝置。
2. 切勿在爐前或爐門放置任何物件，或讓沙土或洗潔劑殘餘物累積在封條表層。
3. 如果微波爐已損壞，則不可再使用。尤為重要的是，爐門必須關緊，並確保下列各部分皆無損壞：
 - a. 門（彎曲）；
 - b. 鉸鏈和門門（破裂或鬆脫）；
 - c. 門封和封條表層。
4. 本微波爐只可由合格專業服務人員修理或調整。

安全使用要點

使用電器時必須遵守基本安全規則，包括下列事項：

警告：為了降低個人燒傷、觸電、火患、受傷或微波能量外泄，用戶必須：

1. 使用前請詳閱“使用手冊”全部內容。
2. 根據此手冊所述用途使用本微波爐。不可在本微波爐內使用腐蝕性化學物質或蒸汽。本微波爐專為家庭加熱及烹調食物而設計，故不適用於其它工商或實驗室用途。
3. 爐內無食物，切勿操作本微波爐，以免空載運行損壞機器。
4. 電線或插座損壞、無法操作正常或已損壞或曾跌落，切勿使用本微波爐。如果電源軟線損壞，為了避免危險，必須由製造商、其服務機構或類似的專業人員更換。
5. 警告：只有在已經提供充分的指導，並確保兒童能夠採用安全的方法使用本微波爐，同時明白不正確的使用方法會造成危險時，才能允許兒童在無人監督的情況下使用微波爐。
6. 為降低爐腔著火的風險：
 - a. 當食物在塑膠、紙或其它可燃材料製成的容器中加熱或烹調時，應時刻注意，防止起火。
 - b. 把袋子放入爐內之前，先除去紙袋或塑膠袋的紐線環。
 - c. 烹調中發生冒煙或起火現象時，請不要立刻打開爐門，否則遇空氣會加大火勢，應立即切斷電源。
 - d. 切勿在微波爐內儲存任何物品。無使用的紙製品、烹調器皿或食物切勿存在爐腔內。
 - e. 微波爐僅用於加熱食物和飲品。烘乾衣物、加熱暖手寶、拖鞋、海綿、濕抹布及類似物品，可能導致人員受傷、起火或引發火災。
7. 警告：禁止加熱裝在密封容器內的液體或其他食物，因為這樣有可能發生爆炸。
8. 使用微波爐加熱飲料時，須擱置片刻，以避免液體延遲沸騰而被燙傷，因此

在處理容器時必須格外小心。

9. 切勿使用微波爐煎炸食物。因為熱油會損壞微波爐零件和烹調器皿，甚至燙傷皮膚。
10. 切勿使用微波爐烹煮或加熱帶殼或硬蛋，因為壓力會導致雞蛋爆裂，爆破可能發生在微波加熱完畢後。
11. 皮厚且硬的食物，如馬鈴薯、整個南瓜、蘋果和栗子，烹煮前需刺幾個小孔。
12. 奶瓶和嬰兒食品罐內的食物應經過攪拌或搖動，餵食前應檢查瓶內食物的溫度，以避免燙傷。
13. 加熱食品可能將熱量傳送至烹調器皿。因此，從微波爐內提取食物和器皿時，應使用鍋夾或戴上隔熱手套，以免高溫燙傷。
14. 用微波爐之前，應檢查所用器皿是否適用於微波爐。
15. 警告：除了受過訓練的維修人員之外，任何人都不可進行檢查各在，以避免危險，包括拆下防止微波能量洩漏的防護蓋等工作。
16. 本產品屬於第二組B級ISM（工業、科學與醫療）設備。第二組涵蓋所有工業、科學與醫療設備，其射頻能量主要用於產生和/或以電磁輻射形式作為原料處理以及火花電蝕設備。B級設備則是指適用於國內建設，或直接地接駁於低瓦特電流供應系統，以供國內建築物使用。
17. 本電器並不是為體質、感覺、或智力有障礙人士（包括小孩）、或缺乏經驗及知識者使用而設，除非他們曾經接受負責安全人士的監督或指示。
18. 請小心看管小孩，以確保他們不會把本電器當作玩具。
19. 本微波爐只能在單獨的線路上使用。
20. 警告：微波爐不要安裝在離爐灶或其它發熱設備很近的區域，否則可能會損壞電器，保修服務將會失效。
21. 警告：在使用時可觸及部分可能會發熱，兒童宜遠離。
22. 本微波爐為嵌入式微波爐，必須按照製造商指定安裝方式嵌入安裝。
23. 本電器工作時爐門或外表面可能會變熱。
24. 本電器工作時可觸及的表面的溫度可能會高。
25. 本電器放置時不能距離牆壁太近。
26. 警告：如果微波爐門或門封已損壞，則不得再使用，直到經有資格的維修人員修好為止。
27. 器具不能再外接定時器或獨立的遙控控制系統的方式下運行。
28. 不要減少本電器兩側和背部的空間，因為要確保與牆壁的最小距離，以便空氣流通。
29. 移動本電器時要保護好裡面的玻璃盤，以免摔壞。
30. 警告：除有資格的維修人員外，其他人來執行檢修操作都是危險的，因為拆下防止微波洩露的防護蓋後會發生微波輻射。如果要更換電源線或爐燈，請將電器送到我們的維修中心。
31. 本微波爐只能用於解凍、烹調和蒸食物。
32. 警告：打開器皿的蓋子或食物的包裹物時小心蒸汽會溢出。

33. 只有在已經提供充分的指導，並確保能夠採用安全的方法使用本微波爐，同時明白不正確的使用方法會造成危險時，才能允許8歲以上的兒童和體質、感覺、或智力有障礙人士、或缺乏經驗及知識者使用本微波爐。
34. 微波爐的清潔和保養工作可由8歲以上的兒童進行，其他兒童要在大人的監督下進行。
35. 如果發生冒煙或起火現象時，請立刻切斷電源並拔掉本電器的電源線，不要打開爐門以便火自動熄滅。
36. 警告：當電器處於組合模式運行時，由於會產生高溫，兒童必須在成人監護下使用微波爐。
37. 器具打算用於家用和類似用途，例如：
 - 在商店、辦公室及其他工作環境的員工廚房區；
 - 農莊；
 - 酒店，汽車旅館和其他居住環境中由客戶使用；
 - 僅提供床位和早餐的快捷酒店環境。
38. 對於在距地面 900 mm 及以上高度使用的且具有可拆卸的轉盤的固定式和嵌裝式器具，使用說明應表明當從器具中取出容器時，注意不要將轉盤拖出。此要求不適用於具有水準底部鉸鏈門的器具。
39. 不要使用粗糙磨料清潔劑或鋒利的金屬刮刀清潔微波爐的門玻璃，因為其會擦傷玻璃表面，從而可能導致玻璃破碎。
40. 警告：為避免可能出現的電擊，換燈前應確定器具已斷開電源。
41. 器具在使用期間會發熱。 注意避免接觸烤箱內的發熱單元。

安裝

1. 請把爐內的包裝物一一取出。
2. 仔細檢查微波爐是否損壞，如爐門不穩或彎曲、門封或封條表層損壞、鉸鏈和門門破裂或鬆脫，以及爐腔或爐門不陷。 如有損壞，請勿使用並立刻聯絡合格的服務人員。
3. 本微波爐應放置於具有足夠承托其重量及最高食物重量的平穩檯面。
4. 本微波爐應不可放置於高溫、潮濕或靠近易燃物體之處。
5. 勿在無玻璃轉盤、轉盤支承和轉軸各在正確位置的情況下操作本微波爐。
6. 確保電線無損壞，或穿過爐底或任何高溫或尖銳的表面。
7. 插座所在位置必須容易進出，以在緊急時能輕易拔除。
8. 本微波爐不可在戶外使用。
9. 本微波爐安裝高度必須大於850mm。
10. 微波爐頂部外殼的上方所需自由空間的最小高度為10mm。

無線電干擾

本微波爐在操作時可能會對您的收音機、電視機及類似的電器造成干擾。一旦發生干擾情況，可進行下列步驟以減少或消除有關干擾：

1. 清潔爐門和封條表層。
2. 重新調整收音機或電視機的接收天線。
3. 根據接收器重新擺放微波爐的位置。
4. 將微波爐搬至遠離接收器之處。
5. 將微波爐插頭插至不同的插座，以使微波爐和接收器處於不同的電路線。

微波爐烹調規則

1. 請監督好小孩，勿讓小孩玩微波爐。
2. 請將食物小心排列，較厚部分應朝盤外擺放。
3. 注意烹調時間。盡量選擇最短的烹調時間，若不足可延長時間。食物嚴重過度烹調會造成冒煙或燃燒等危險。
4. 烹調食物時應蓋著。加蓋可防止食物噴濺，而且食物更均勻熟透。
5. 在進行微波烹調時翻轉食物，能使食物更快煮熟，如雞肉和漢堡包。體積較大的烤肉則須至少翻轉一次。
6. 魚丸等食物在烹調至一半時，宜重新對換位置，如上下對調，中間部分則與旁邊對換。

接地指示

本電器必須接地。本微波爐備有一條接地線的接地插頭。它必須插在良好和正確接地的插座上。一旦發生電流短路，接地裝置將為外洩電流提供排電路線，即以減低發出觸電的風險。建議必須為本微波爐提供各別的電路。使用高電壓是非常危險的事，而且可能導致火患或其他破壞微波爐的意外。

警告：錯誤使用接地插頭會導致發出觸電的風險。

備註：

1. 若您對接地或電器指示有任何疑問，請諮詢合格的電器技術工或服務人員。

2. 對於因為無遵守電路銜接查詢所造成的微波爐損壞或個人受傷，廠商或代理無需負任何責任。

本電纜中的電線是以下列顏色區分：

青和黃=地線

藍=中線/零線

褐=火線

撥電尋求援助服務之前應做事項

如果微波爐無法操作，應檢查：

1. 微波爐的插頭是否插妥。若未插好，先把插頭拔離插座，待 10 秒鐘後在穩定插妥。
2. 檢查電路保險絲是否燒毀，或主要電路保險斷路是否有跳制，若這些看起來都操作正常，則需使用其他工具檢查插座。
3. 控制台的程控是否正確。
4. 爐門是否關好，並啟動童鎖功能。否則微波能量將無法流入爐內。

若上述所有行動皆無法修正有關情況，則必須聯絡合格專業技術人員。切勿擅自調整或修理。

器皿指南

1. 最理想的微波爐器皿必須能透射微波，使能量穿透容器，加熱容器中的食物。
2. 微波無法穿透金屬，因此不宜使用金屬器皿或金屬飾邊的餐具。
3. 切勿使用再循環再生紙製品進行微波烹調，因為它們含細微的金屬碎片，可能引致火花和/或著火燃燒。
4. 比之四方形/長方形，圓形/橢圓形餐具更適合微波爐使用，因為在角落的食物通常會過熱。
5. 可用寬度較小的鋁箔鋪蓋食物，以防止外露的食物過熱。但必須注意，不可使用過量，同時在鋁箔和爐腔之間保持至少 1 吋（2.54 厘米）的距離

器 皿	微波烹調	燒烤	組合烹調
耐熱玻璃	可	可	可
不耐熱玻璃	不可	不可	不可
耐熱陶瓷器	可	可	可
微波爐安全使用塑料餐具	可	不可	不可
保鮮膜/廚房用紙	可	不可	不可
金屬烤盤	不可	可	不可
金屬架子	不可	可	不可
鋁箔及箔紙容器	不可	可	不可

規格

電壓及頻率	220V~50Hz
功率消耗（微波）（燒烤）	1300W（微波）\1050W（燒烤）
額定微波輸出功率	800W
操作頻率	2450MHz
外形尺寸（高×闊×深）	390mm ×595mm×348mm
內腔尺寸（高×闊×深）	177mm×315mm×334mm
內腔容積	20L
烹調均勻性	轉盤系統
淨重	約 13.2kg

組件名稱

(1) 門安全鎖系統

(2) 視窗

(3) 滾輪支架

(4) 連接器

(5) 按鈕

(6) 主控台


(7) 波導口

(請勿移除覆蓋波導管的雲母片)


(8) 玻璃盤

(9) 發熱管

(10) 燒烤架

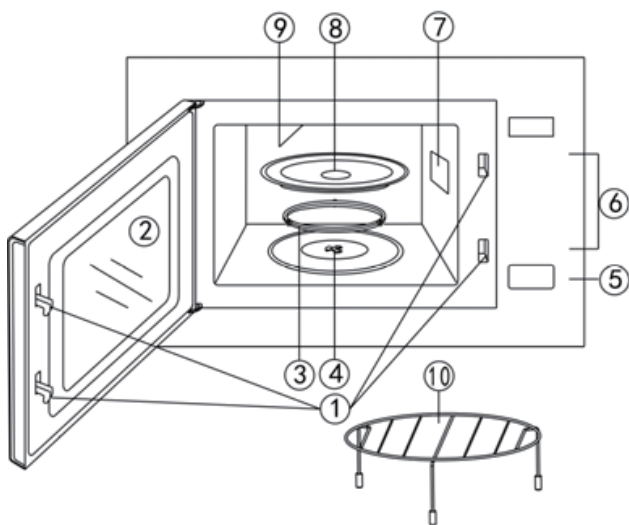

控制台說明

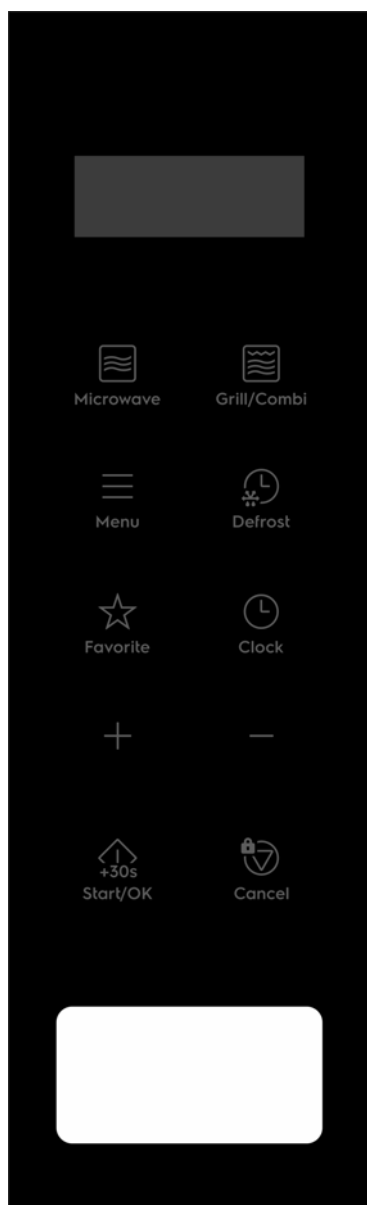

顯示幕 (DISPLAY SCREEN)

顯示烹調時間、火力及各項指示燈狀態。

微波 (MICROWAVE)

用於選擇微波烹調的功率檔位。

燒烤 / 微波烤 (GRILL/COMBI.)

用於設置燒烤烹調程式和設置微波與燒烤組合烹調程式。

功能表 (MENU)

用於選擇自動烹調功能表。

解凍 (DEFROST)

按一次此鍵，可根據時間對食物進行解凍。

按兩次此鍵，可根據重量對食物進行解凍。

常用程式 (FAVORITE)

用於保存烹調程式。

時鐘 (CLOCK)

用於設置時鐘時間。

+/- (+/-)

用於設置時間、食物重量或份量。

開始 / 確定 (START/OK)

用於啟動烹調程式。

連續按下此鍵若干次，可設置烹調時間，並立即以最大功率開始烹調。

取消 (CANCEL)

按一次此鍵，可暫時暫停烹調；

按兩次此鍵，可取消烹調程式。

用於設置省電功能和兒童鎖。

操作方法

1. 上電時，蜂鳴1聲，顯示幕顯示「1: 01」（“: ”閃爍），此時已處於待機狀態，時鐘開始計時。
2. 用戶設置過程中若中斷操作30秒，蜂鳴1聲，系統自動返回到待機狀態。
3. 在烹調過程中，按「取消」鍵1次為，系統進入烹調暫停狀態，烹調暫停狀態下按「開始/確定」鍵1次繼續烹調；在烹調過程中連續按「取消」鍵2次可取消此烹調程式返回待機。
4. 每次烹調程式完成後，顯示幕一直顯示“End”，蜂鳴器發出4聲提示音。按下「取消」鍵或打開爐門或等待2分鐘后，系統恢復待機狀態。
5. 操作過程中按有效鍵，蜂鳴器響一聲，按無效鍵，蜂鳴器響兩聲。
6. 使用「+、-」鍵選擇參數時，可長按進行快速選擇。
7. 待機狀態下，無操作1分鐘，顯示幕亮度自動降低，開、關門或按任意鍵后，顯示幕亮度恢復正常。

時鐘設置

1. 待機狀態下，按「時鐘」鍵1次，顯示幕顯示「Hr12」，此時為12小時制（設置範圍為1: 00~12: 59）；再按1次「時鐘」鍵，顯示幕顯示「Hr24」，此時為24小時制（設置範圍為0: 00~23: 59），按該鍵可以循環選擇時制；
2. 按「+、-」鍵輸入時鐘小時位，小時位閃爍顯示；
3. 按「時鐘」鍵或「開始/確定」鍵1次確認，分鐘位閃爍顯示；
4. 按「+、-」鍵輸入時鐘分鐘位；
5. 按「時鐘」鍵或「開始」確定「鍵1次確認，時鐘設置完畢並開始走時。

備註：烹調過程中可按「時鐘」鍵查詢當前時鐘5秒。

+30秒功能設置

1. 在待機狀態下，連續按「開始/確定」鍵輸入烹調時間（時間輸入規程每按鍵1次遞增30秒，最長可加時到“95: 00”），系統自動啟動該程式烹調並開始倒計時，全程使用微波100%火力。
2. 在烹調工作過程中（解凍功能表、自動功能表除外），按“開始/確定”鍵可以進行加時（最長可加時到95: 00）。

微波烹調

1. 在待機狀態下，按「微波」鍵進入火力設置，顯示幕顯示「P100」，表示烹調火力預設為100%，連續按「微波」鍵迴圈選擇微波火力；
2. 按「+、-」鍵輸入烹調時間（最多可輸入95分鐘）；
3. 按「開始/確定」鍵1次確認，烹調啟動，顯示幕顯示倒計時。

按「微波」次數	火力（顯示）	按「微波」次數	火力（顯示）
一次	100% (P100)	六次	50% (P-50)
兩次	90% (P-90)	七次	40% (P-40)
三次	80% (P-80)	八次	30% (P-30)
四次	70% (P-70)	九次	20% (P-20)
五次	60% (P-60)	十次	10% (P-10)

備註：烹調過程中，按「微波」鍵可查看當前烹調功率；若需全功率烹調，可跳過步驟1

按時解凍

1. 在待機狀態下，按「解凍」鍵1次，顯示幕顯示「0：00」；
2. 按「+、-」鍵輸入解凍時間（最多可輸入95分鐘）；
3. 按「開始/確定」鍵1次確認，解凍開始，顯示幕顯示倒計時；

備註：解凍過程中，系統會暫停併發出3聲蜂鳴，提醒您翻動食物，之後按“開始/確定”鍵可恢復解凍。

重量解凍

1. 在待機狀態下，按「解凍」鍵2次，顯示幕顯示「0」；
2. 按「+、-」鍵輸入食物重量；
3. 按「開始/確定」鍵1次確認，解凍開始，顯示幕顯示倒計時；

備註：解凍過程中，系統會暫停併發出3聲蜂鳴，提醒您翻動食物，之後按“開始/確定”鍵可恢復解凍。

燒烤

燒烤功能特別適用於肉片、牛排、豬排、烤串、香腸和雞塊等食物，也適用於熱三明治和芝士焗菜。

1. 待機模式下，按一次「燒烤/微波烤」鍵。
2. 按“+、-”鍵設置烹調時間（最長95分鐘）。
3. 按「開始/確定」鍵確認。

備註：烹調過程中，按「燒烤/微波烤」鍵可查看當前烹調模式。

組合烹調

組合1 “Co-1”：一個循環內，30%時間為微波烹調，70%時間為燒烤烹調，

適用於烹調魚類或芝士焗菜。

組合2 “Co-2”：一個循環內，55%時間為微波烹調，45%時間為燒烤烹調，適用於烹調布丁、煎蛋捲、烤土豆和禽類。

1. 待機模式下，按兩次或三次「燒烤/微波烤」鍵，選擇“Co-1”（組合1）或“Co-2”（組合2）。
2. 按“+、-”鍵設置烹調時間（最長95分鐘）。
3. 按「開始/確定」鍵確認。

備註：烹調過程中，按「燒烤/微波烤」鍵可查看當前烹調模式。

常用程式

設置方法：設置完烹調功能表后，長按“常用程式”鍵3秒，蜂鳴1聲，顯示幕顯示“- - - -”3秒，此時，設置的功能表已被收藏。

啟動方法：在待機狀態下，按「常用程式」鍵1次，顯示幕顯示收藏功能表的烹調時間/重量。然後按「開始/確定」鍵1次啟動烹調，顯示幕顯示烹調倒計時。

備註：本功能僅收藏1個功能表，且擁有斷電記憶。

省電功能

設置方法：在待機狀態下，按“取消”鍵1次，蜂鳴1聲，顯示幕熄滅，此時系統已進入省電模式。

解除方法：在省電狀態下，開、關門或按任意鍵1次，即退出省電模式，返回待機

童鎖功能

設置方法：待機狀態下，長按「取消」鍵3秒后，蜂鳴1聲，顯示幕顯示“Loc”3秒，童鎖功能設置生效，此時按任意鍵均無效。

解除方法：童鎖狀態下，長按“取消”鍵3秒后，此時系統已恢復正常。

轉盤復位功能

使用此功能，可在烹飪結束後將爐內器具復位至初始位置，方便您將食物從烤箱中取出。轉盤復位功能默認處於開啟狀態。

注意事項：

1. 此功能僅對完整的烹飪過程有效。若在烹飪過程中按下“取消”鍵或打開/關閉烤箱門，該功能將失效。
2. 在轉盤復位過程中，若您打開烤箱門或按下“取消”鍵，烤箱將切換至待機模式。
3. 若烹飪時間在 5 分鐘以內，轉盤的復位精度誤差在 30 度以內。
4. 烹飪過程完成后，轉盤復位功能將啟動。此時，屏幕將顯示 “[]”

自動功能表烹調

對於以下食物或烹調模式，無需設置烹調時間和火力，只需選擇食物類型及重量/份量即可。

- 1. 待機模式下，反覆按「功能表」鍵選擇食物代碼。
- 2. 按“+、-”鍵選擇食物重量或份數。
- 3. 按「開始/確定」鍵啟動烹調。

自動選單：

功能表		重量/分量	顯示	備註
A-01	牛奶/咖啡 (200ml/ 杯)	1杯	1	1. 烹飪雞肉、牛肉/羊肉和烤串時，系統會暫停並提醒您翻動食物，之後按“開始/確定”鍵可恢復烹飪。 2. 自動烹飪效果受電壓波動、食物形狀大小、個人對食物熟度的偏好以及食物在爐內擺放方式等因素影響。 若您認為烹飪效果不理想，可適當調整烹飪時間
		2杯	2	
		3杯	3	
A-02	米飯 (米：水 =1.6~1.8)	150g	150	
		300g	300	
		450g	450	
		600g	600	
A-03	義大利面	100g	100	
		200g	200	
		300g	300	
A-04	土豆 (230±10g/個)	1個	1	
		2個	2	
A-05	自動翻熱	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
		700g	700	
		800g	800	
A-06	魚	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
A-07	雞肉	800g	800	
		1000g	1000	
		1200g	1200	
		1400g	1400	
A-08	牛肉/羊肉	200g	200	
		300g	300	
		400g	400	
		500g	500	
		600g	600	
A-09	烤串	100g	100	
		200g	200	
		300g	300	
		400g	400	
		500g	500	

清潔與保養

1. 清洗爐腔之前，須關閉微波爐，並從插座上拔去電源線插頭。
2. 經常保持爐腔清潔。當食物或湯水濺到爐內壁時，可用濕布擦去。如爐內壁很骯髒則可使用軟性洗潔劑擦洗。切勿使用粗糙、磨損性的洗潔劑，它可能導致爐門表層被染色、刮花或變得無光澤。
3. 微波爐外表面應用濕布拭擦。注意不要讓水滲入爐縫或通風口，以免損壞爐內零件。
4. 爐門和爐窗內外兩側、門封和附件部分必須經常使用濕布拭擦乾淨，不可用腐蝕性洗潔劑。
5. 請勿使用蒸汽清潔器。
6. 切勿弄濕控制台。若控制板被弄濕，可用軟的乾布抹擦。在擦控制台時，請將爐門打開，以免意外啟動微波爐。
7. 爐內外如有蒸汽凝聚成的水滴，可用軟布擦淨。這是因為微波爐在高溫潮濕的情況下操作所致，屬正常情況。
8. 必須經常清潔玻璃轉盤。可用溫熱的肥皂水或洗碗機清洗，再抹乾放回原位。
9. 必須經常擦洗轉盤支承和爐腔底面，以減低吵雜音。請用軟性洗潔劑清洗爐腔底面，而轉盤支承則可用溫熱的肥皂水或洗碗機清洗，清洗后抹乾放回原位。
10. 爐內如有異味，可用一杯水加一粒檸檬汁和皮煮 5 分鐘即可消除。過後需用軟布抹乾。
11. 若必須更換爐燈，務必諮詢本廠代理以進行更換。
12. 微波爐必須經常保持乾淨，去除任何食物殘餘。若無良好保持乾淨，其表層易變壞，進而縮短其壽命，甚至造成危險。
13. 請勿將此電器隨意丟置在垃圾桶，應將之丟棄在有關當局指定的垃圾處理中心。
14. 帶燒烤功能的微波爐在第一次使用時可能會產生輕微的煙霧並且有異味。因為微波爐在製造時，使用的鋼板上面塗有潤滑用油，所以新微波爐在剛使用時會產生油煙和潤滑油因燒烤產生的異味，這屬於正常現象，使用一段時間后這一現象就會消失。

故障檢查



警告

請查閱安全章節

問題	可能的原因	故障解除方法
該電器不能操作。	該電器已關閉。	開啟該電器。
該電器不能操作。	該電器的插頭未插上電源。	給該電器插上電源。
該電器不能操作。	保險盒內的保險絲熔斷了。	檢查保險，若保險熔斷一次以上，請聯繫專業電工。
燈不亮。	燈壞了。	需更換燈。
微波爐內有火花。	有金屬碟子或帶金屬邊飾的碟子。	將該碟子取出。
微波爐內有火花。	有金屬叉子或鋁箔接觸到內壁。	確保開肉叉子和鋁箔不接觸內壁。
轉盤裝置刮擦炊具或發出刺耳的噪音。	玻璃烹飪盤下有異物或污垢。	清潔玻璃烹飪盤下面的區域。
該電器因不明原因停止操作。	發生故障。	若這種情況重複出現，請給客戶服務中心打電話。

若您無法自行解決該問題，請與經銷商或客戶服務中心聯繫。

您可以在該電器的銘牌上找到客戶服務中心所需的必須參數。

我們建議您將參數寫在此處：

型號（MOD）。

.....

產品編號（PNC）

.....

序列號（S. N.）

.....

消費者服務中心

Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com	Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com
Indonesia Layanan langsung: 08041119999 Electrolux Indonesia Jl. Tanah Abang II No.42, Petojo Selatan Kecamatan Gambir, Kota Jakarta Pusat, Daerah Khusus Ibukota Jakarta 10160, Indonesia Email: customercare@electrolux.co.id SMS & WA : 0812.8088.8863	Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com
Vietnam Consumer Care Center Toll Free: 1800 588 899 Electrolux Vietnam Ltd Address: Unit 1,2, Floor 10, Sofic Tower, 10 Mai Chi Tho, An Khanh Ward, HCM city, Vietnam Office Tel : (+84 28) 3910 5465 Email: vncare@electrolux.com	Singapore Consumer Care Centre, Tel : (+65) 67273699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com
香港 服務專線: (+852) 3193 9888 大昌行電器維修中心 香港九龍灣啟祥道20號大昌行集團大廈4樓 電子郵件: customercare@dch.com.hk 網站: www.electrolux.com.hk	

RoHS
Compliant

**Conformed to the stipulation on permissible content limitation of some hazardous & restricted chemical substances.
(RoHS compliant)
(According to the Circular No. 30/2011/TT-BCT, Vietnam, dated 10th August, 2011)**

