 
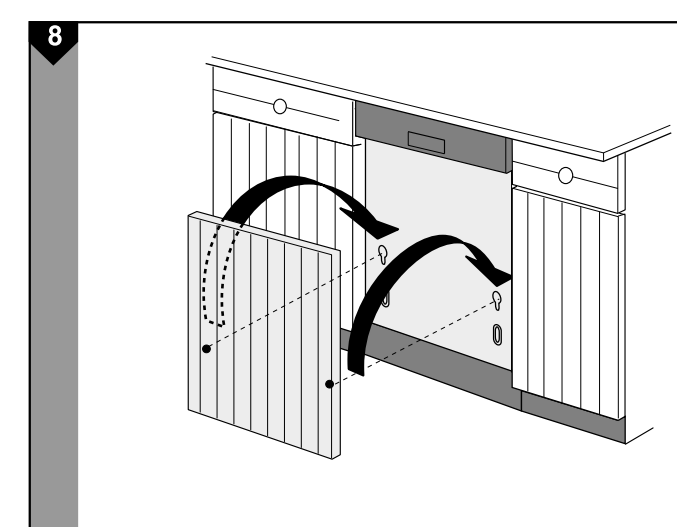 
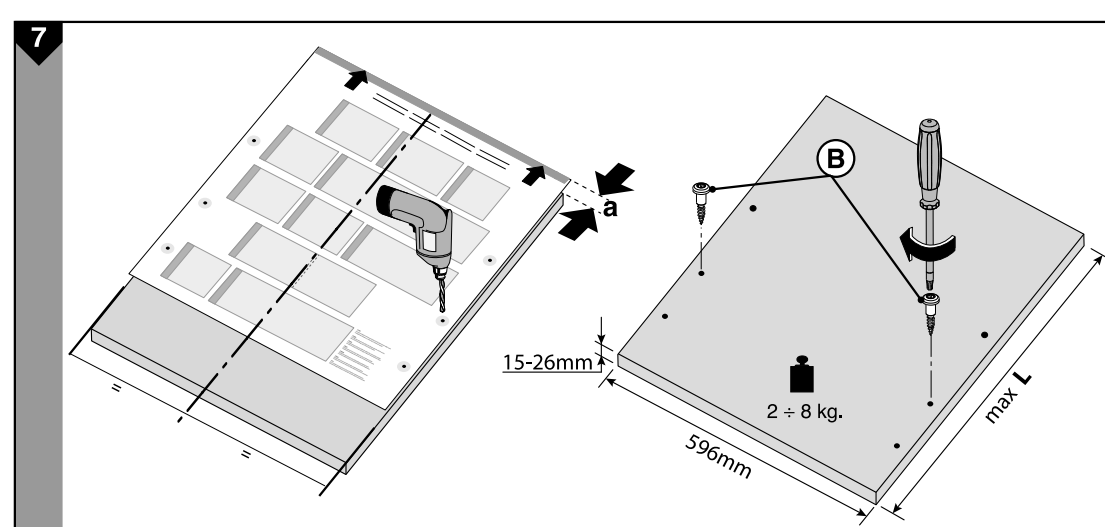 
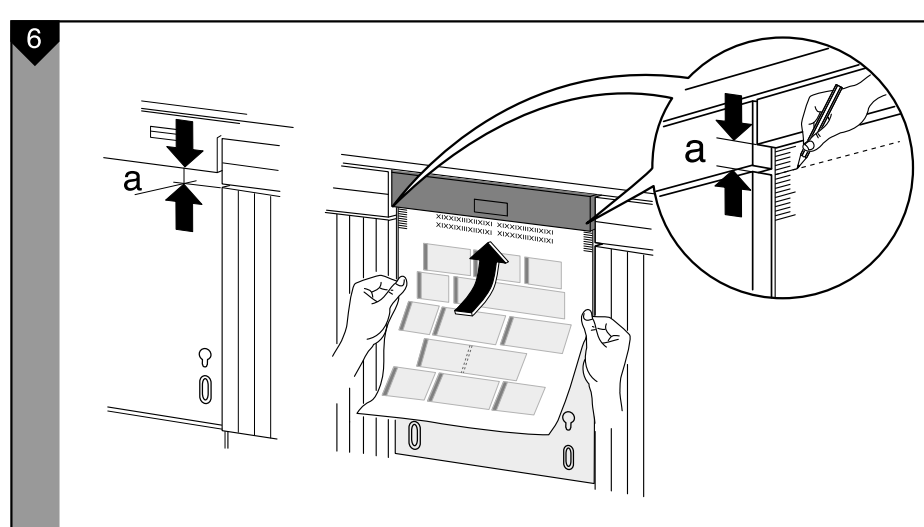 
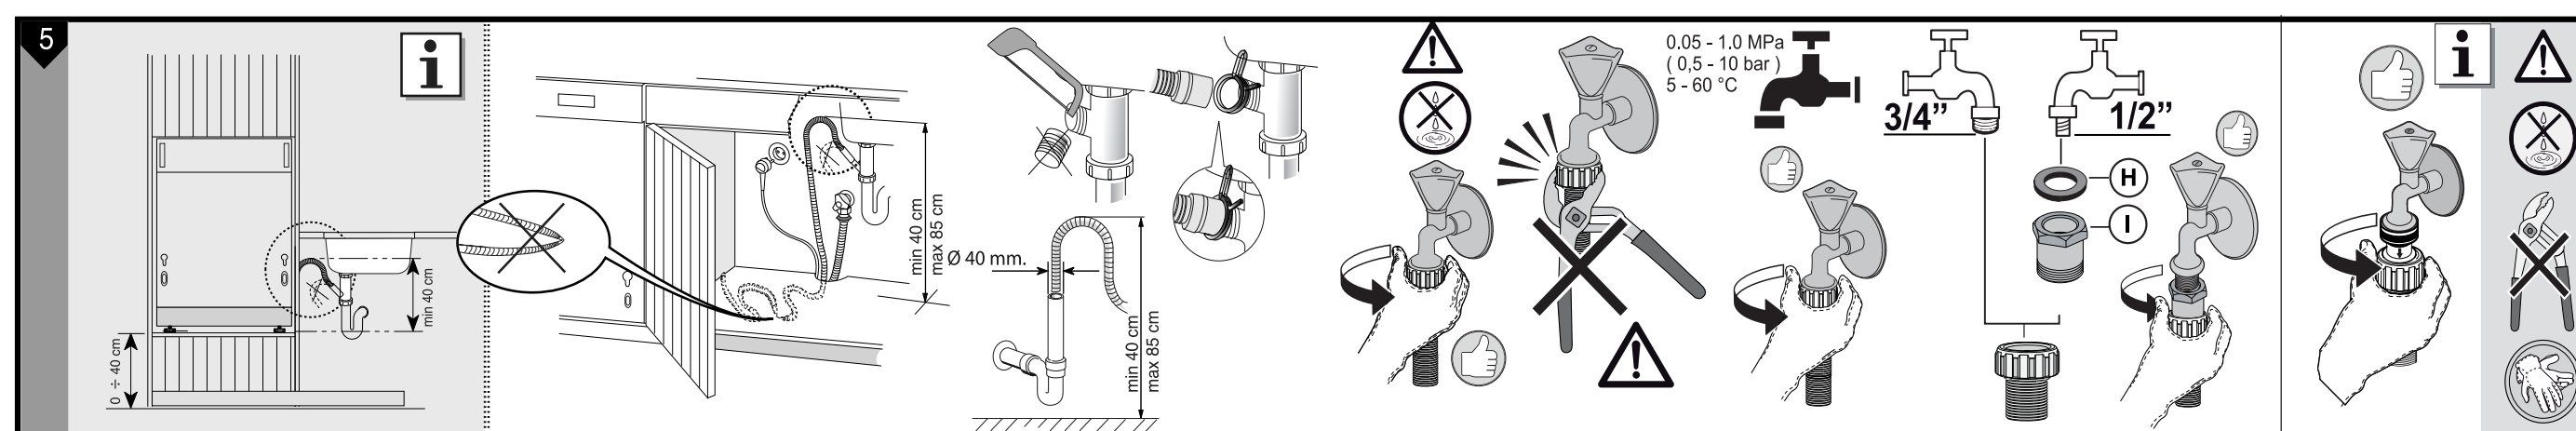 
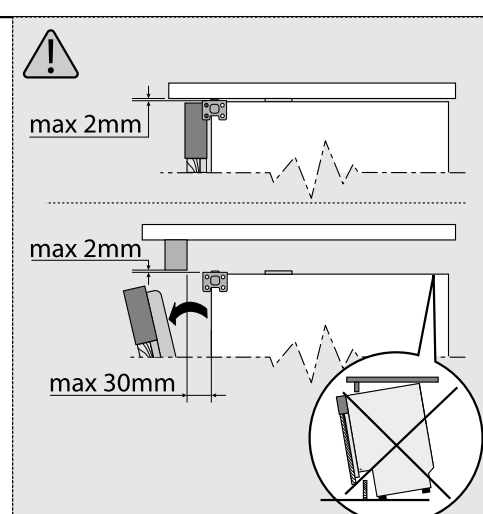 
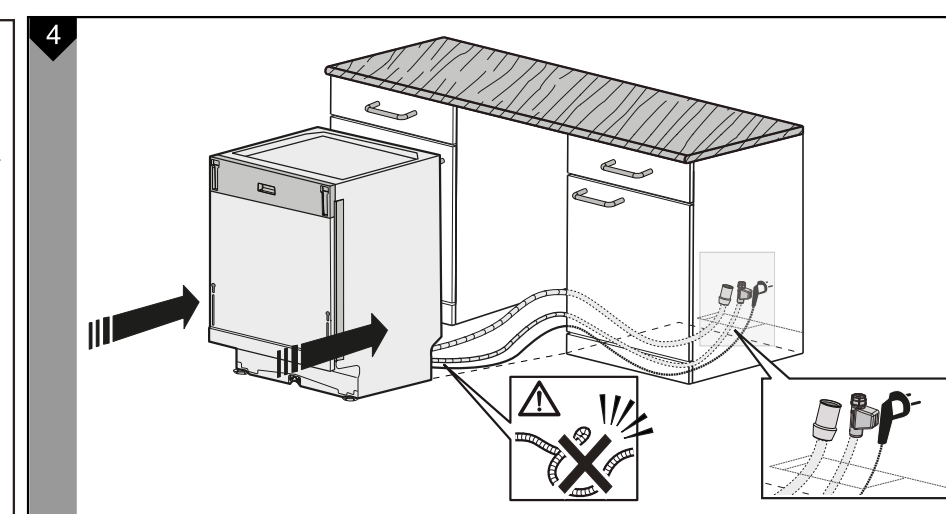 
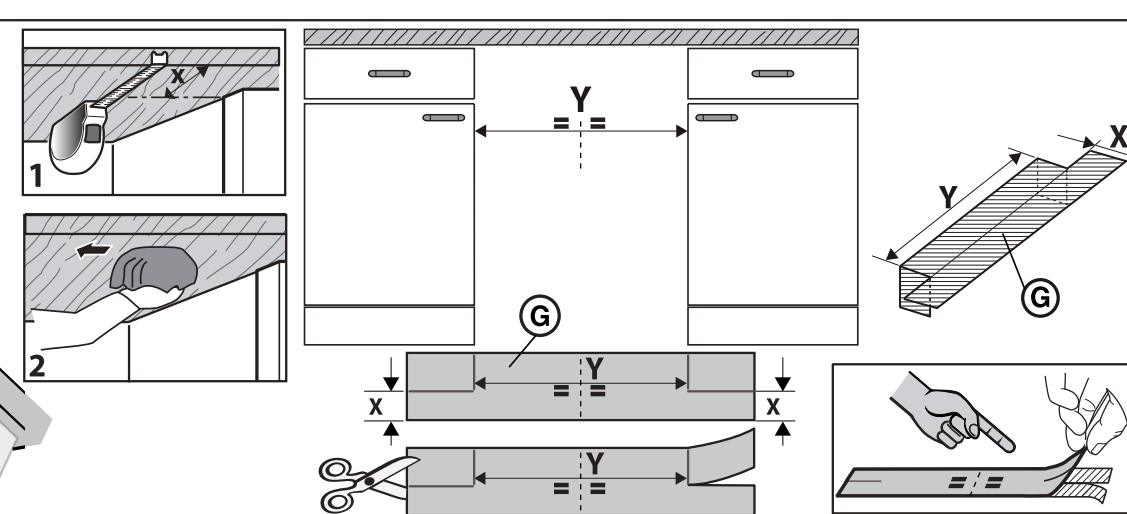 
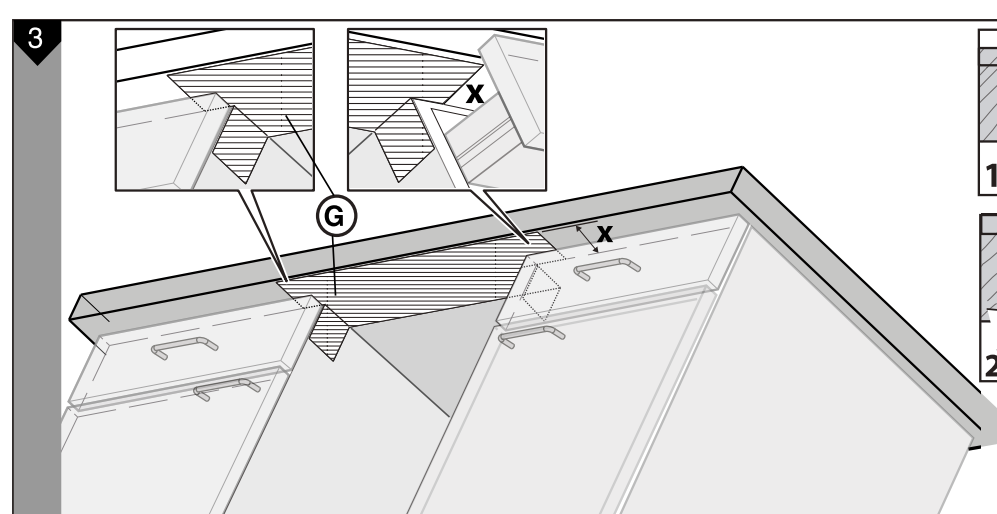 
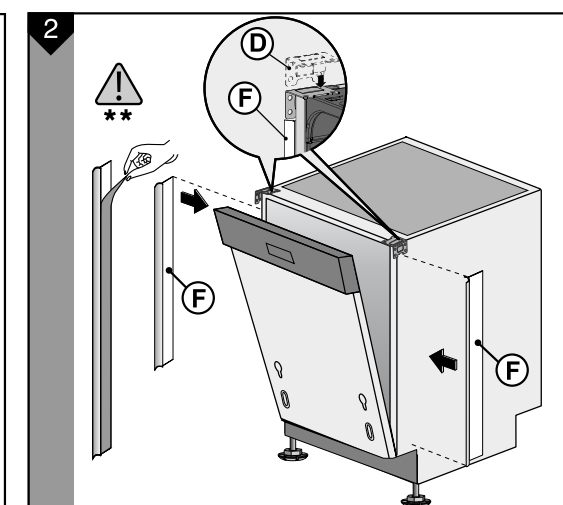 
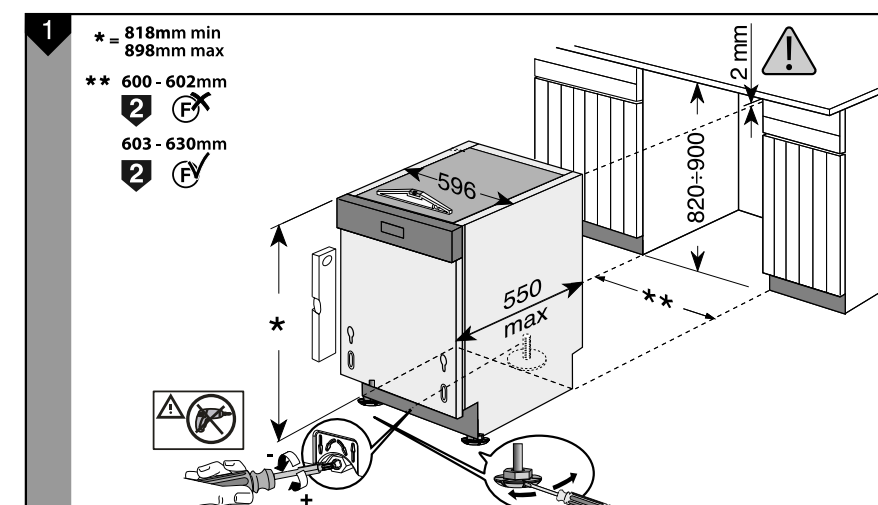 
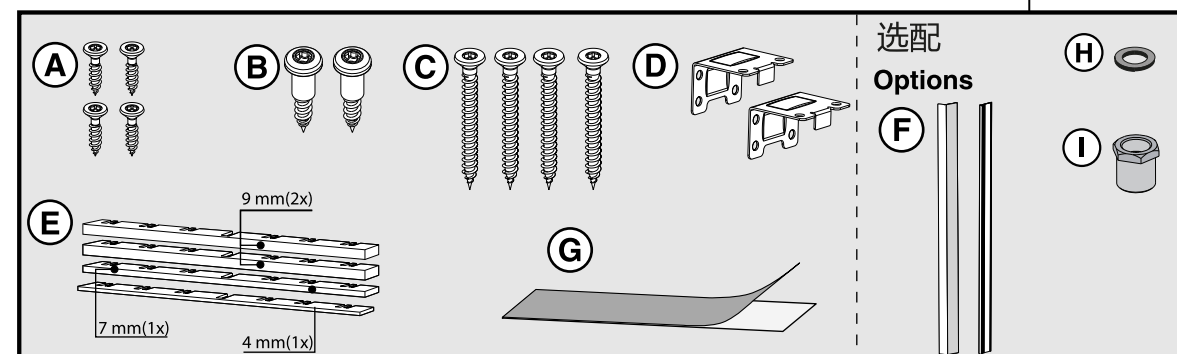 


注意!
对于洗碗机门板和嵌入式安装, 请仔细阅读本安装说明。
否则将导致设备损坏, 人员受伤和机器不能正常工作。
如果您是网络获取本说明, 请确保其型号与您购买的产品一致。
如电子档遗失, 您也可以致电我们的客服获取纸质档。

ATTENTION!
For the fitting of the furniture panel and the building in of the dishwasher, please follow carefully the instructions.
Failure to do this will cause damage, injury and incorrect working of the appliance.
In case you have retrieved this from web, ensure you have the correct template that fits your product. If you have lost this drill template, contact customer care to order a physical copy.

 安装时请佩戴手套, 以免受伤。
wear gloves to prevent potential injury

min : 最小
max : 最大

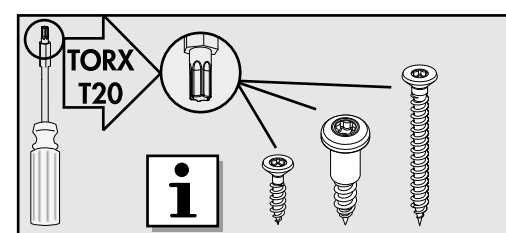

a mm	9 mm	7 mm	4 mm	max L mm
0...5	-	-	-	600
6...9	-	-	1	596
10...11	-	1	1	593
12...13	-	1	-	591
14...15	-	1	1	589
16...17	1	-	-	587
18...19	1	1	-	584
20...21	2	-	-	582
22...23	1	1	1	580
24...25	2	-	1	578
26...27	2	-	-	575
28...29	2	1	-	575
30...33	2	1	1	571

