




Electrolux

User Manual

说明书


ULTIMATEHOME 700

 EFW713 / EFW717

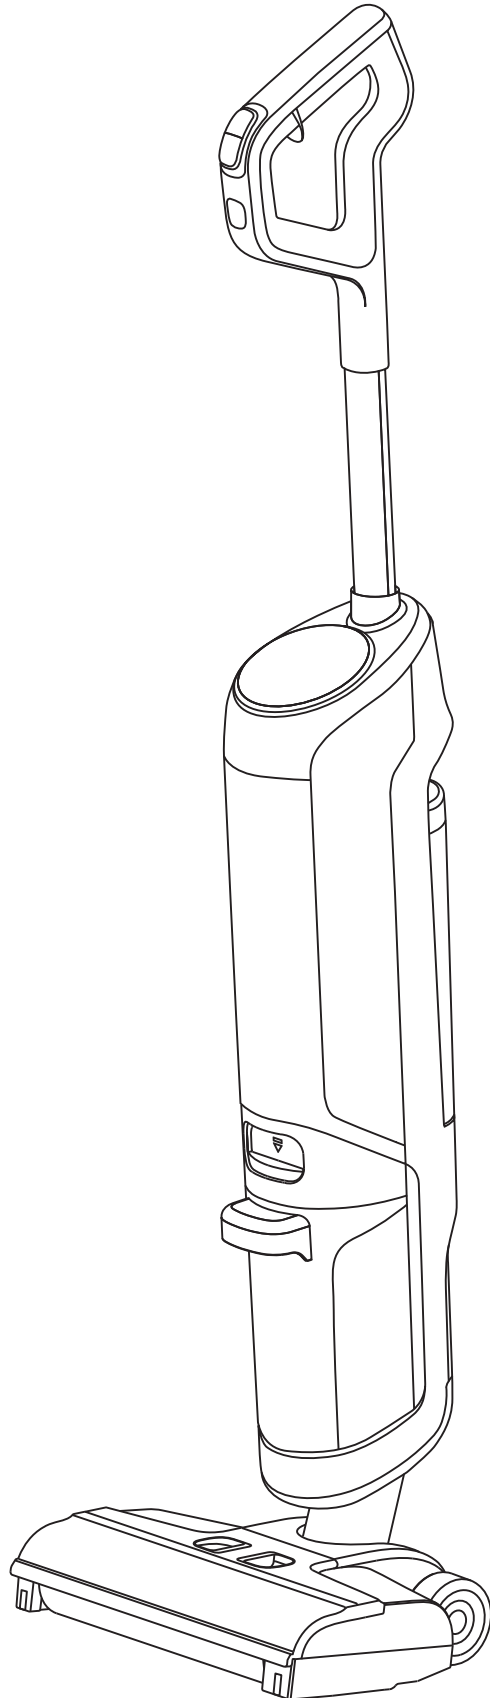


*Actual product may differ from illustration.

 
*图片仅供参考, 请以实物为准

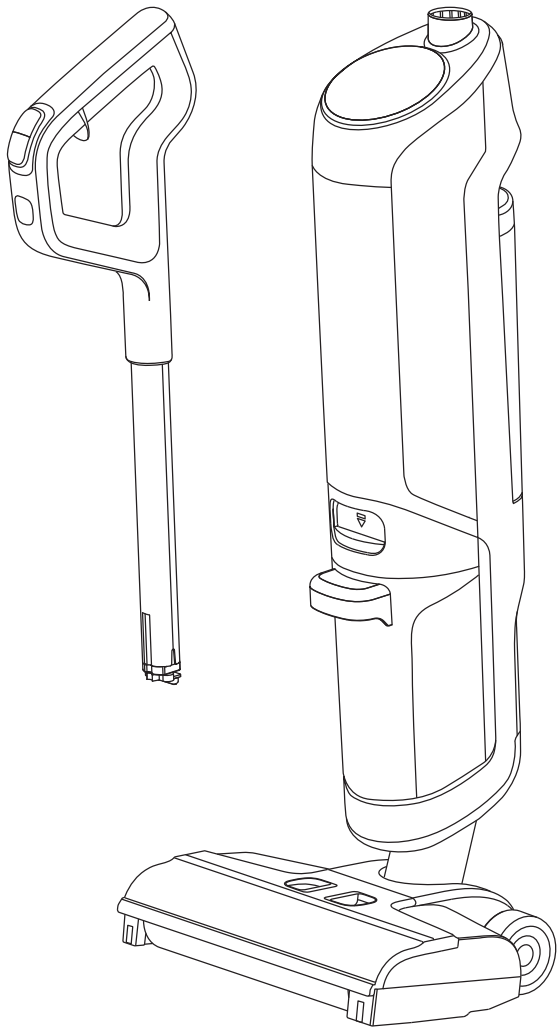



Accessories 附件

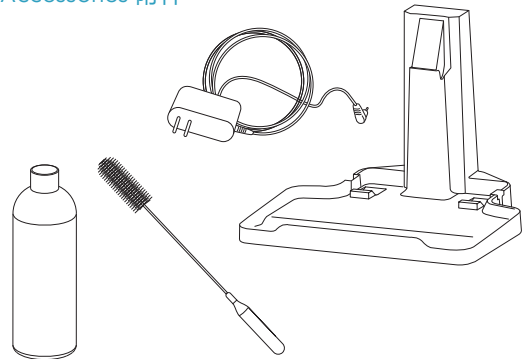 


Additional Parts 备用配件

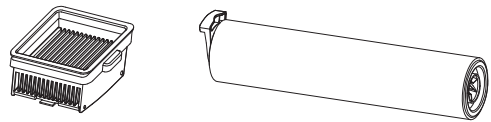 

  *Actual product may differ from illustration.
*图片仅供参考, 请以实物为准













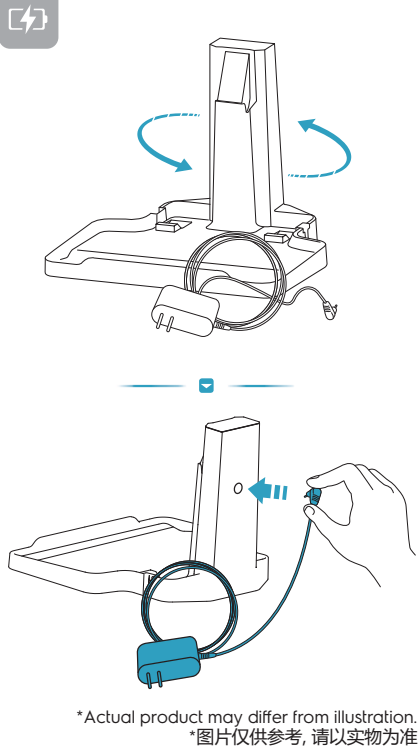
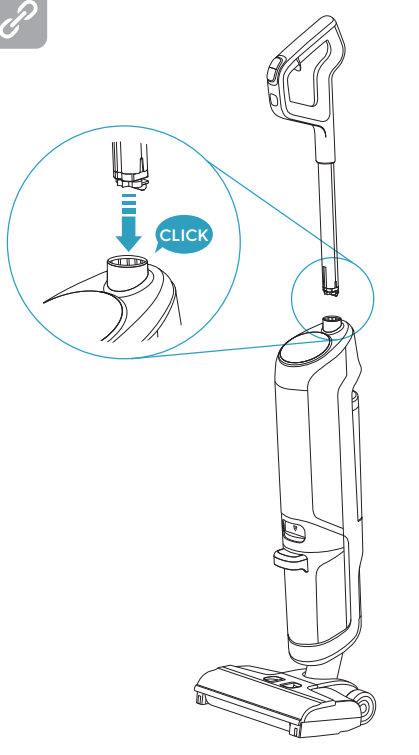


 
*Actual product may differ from illustration.
*图片仅供参考, 请以实物为准

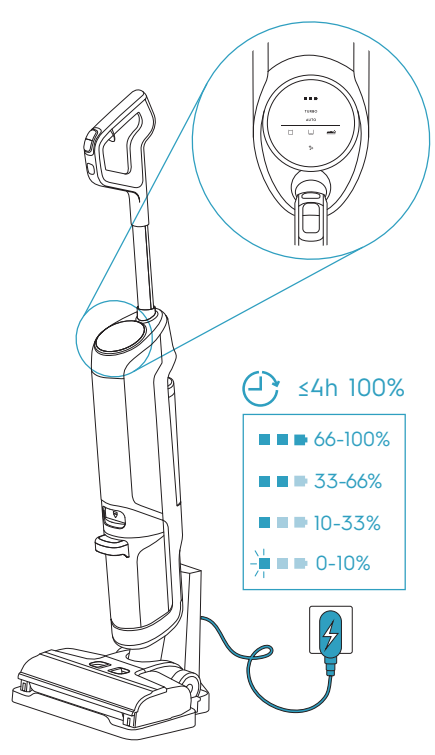

🕒 ≤4h 100%

               
- ■ ■ 66-100%
- ■ ■ 33-66%
- ■ ■ 10-33%
- 🔋 0-10%

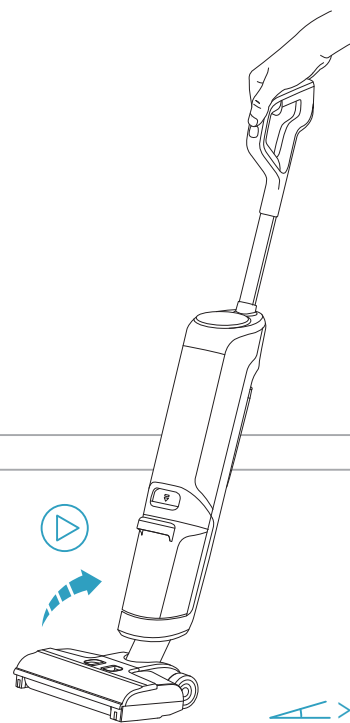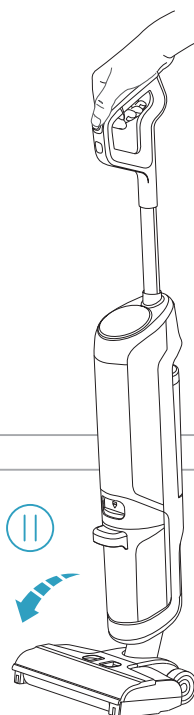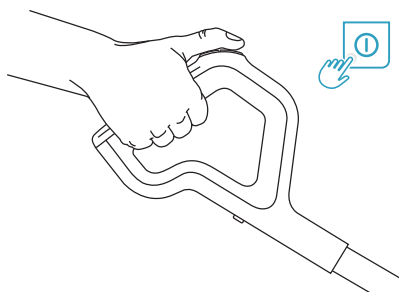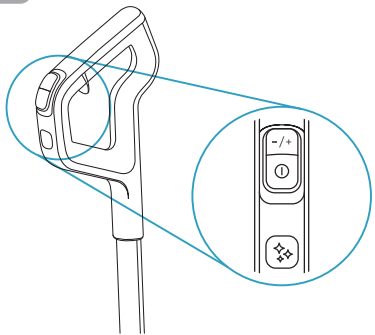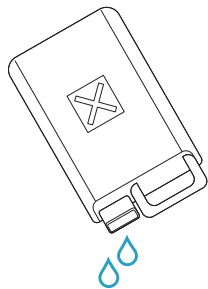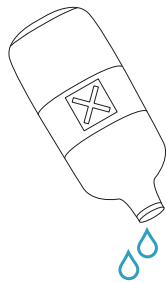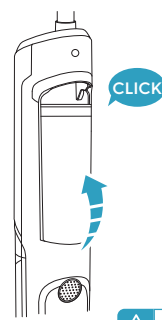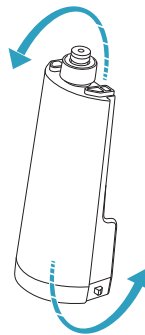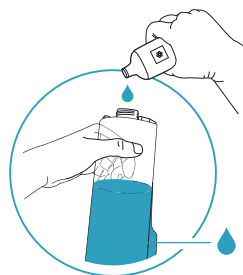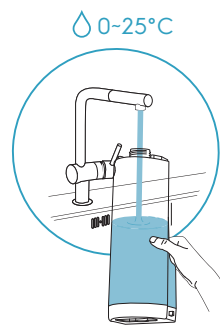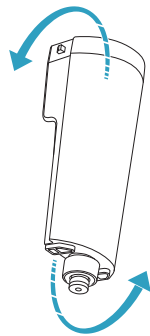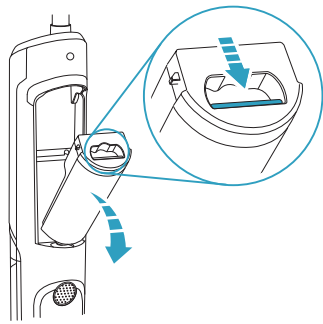

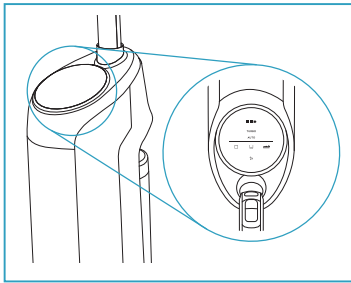

🕒 ≤4h 100%

 - ■ ■ 66-100%
- ■ 33-66%
- 10-33%
- 0-10%

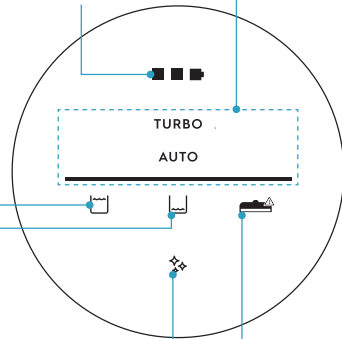

TURBO 强力模式 ⚡⚡⚡

AUTO 自动模式 ⚡⚡⚡

 
 
 
TURBO 强力模式 ⚡⚡⚡

MIN 标准模式 ⚡

*EFW717 *EFW713

吸水模式

1sec

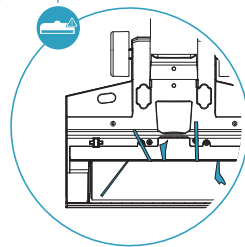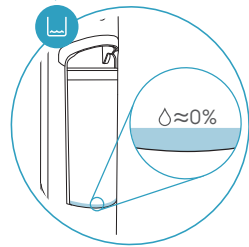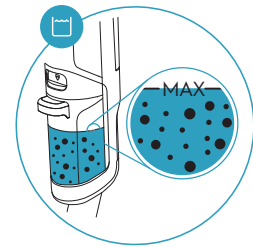


ON






自清洁模式

2mins











0%

      *Actual product may differ from illustration.
*图片仅供参考, 请以实物为准

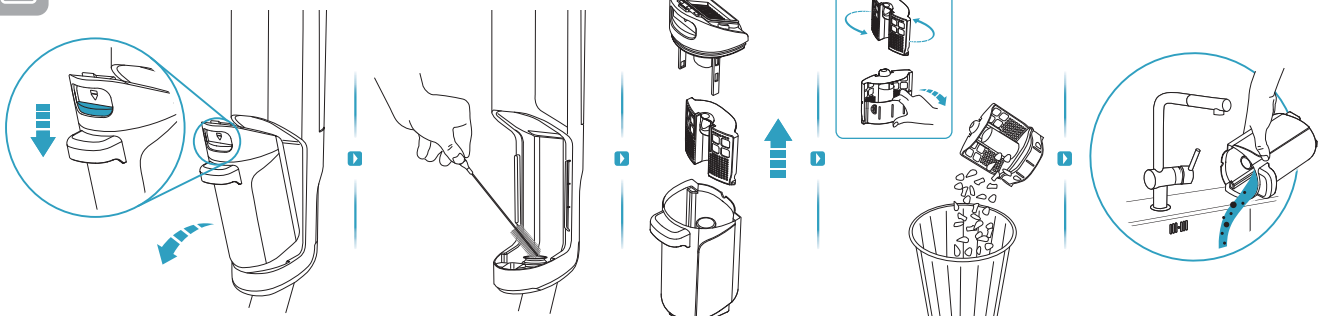


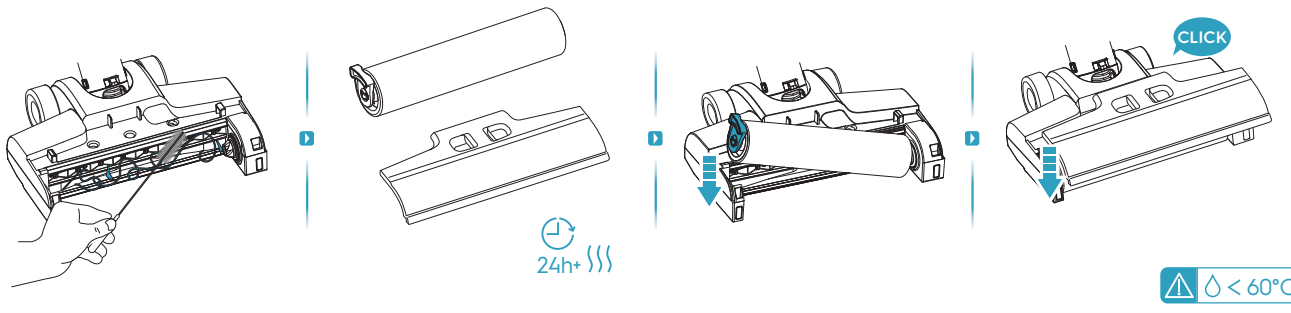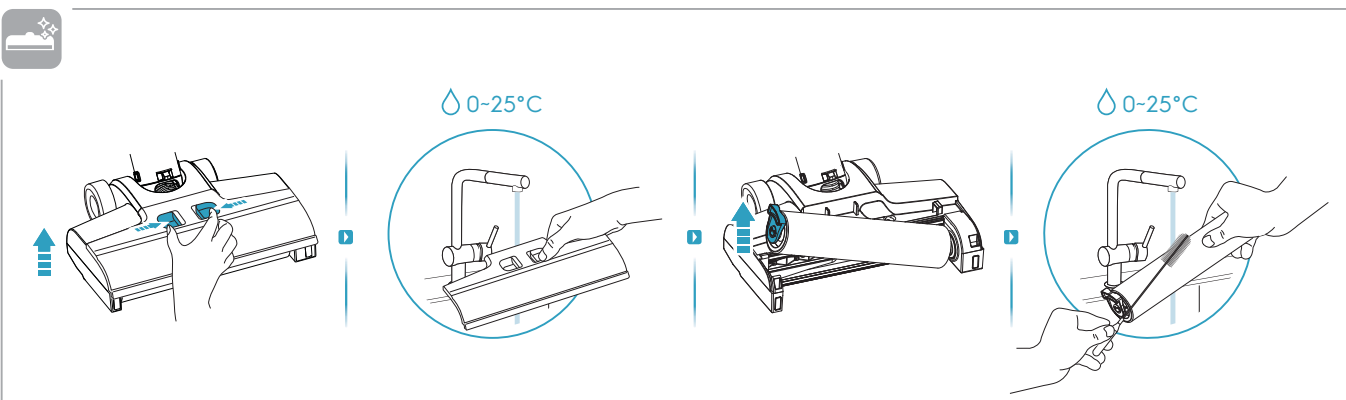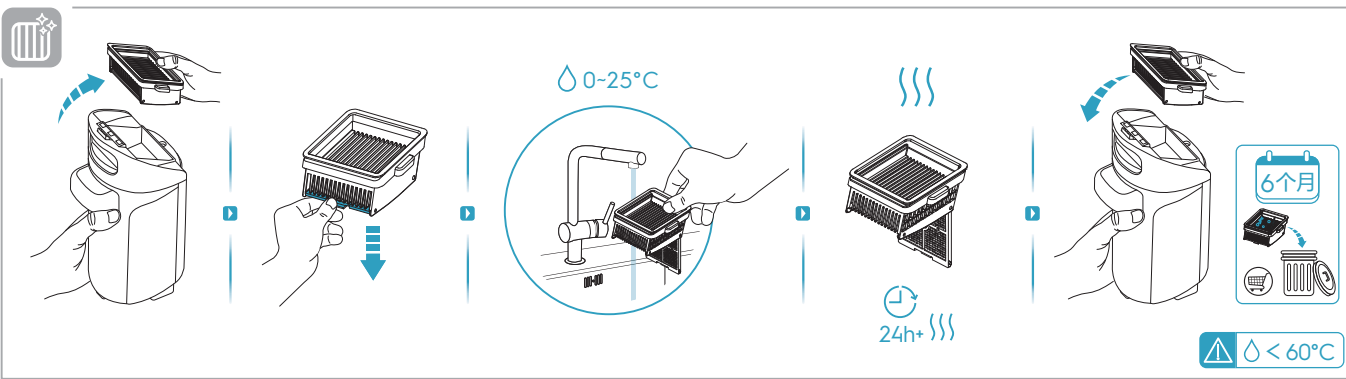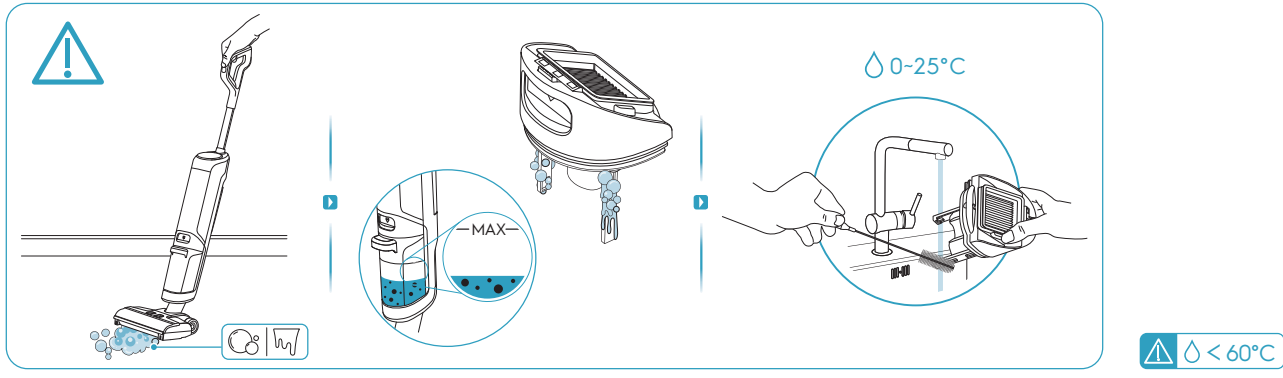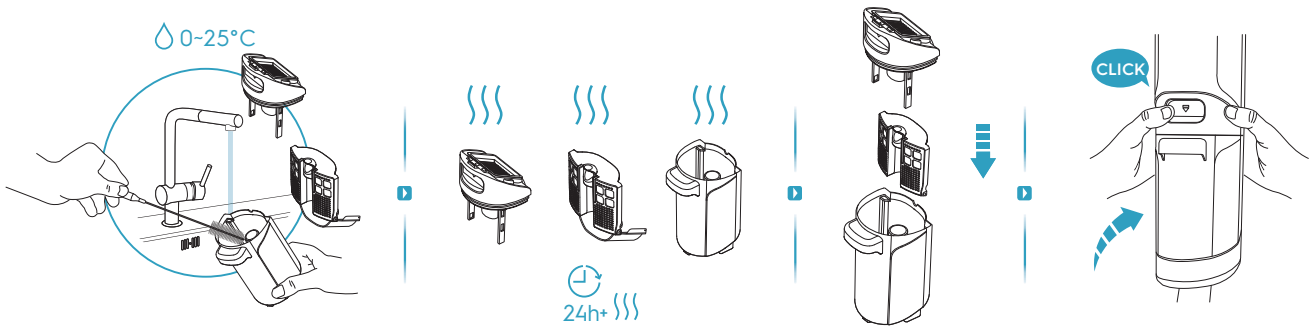

△ < 60°C

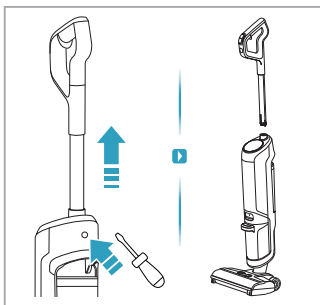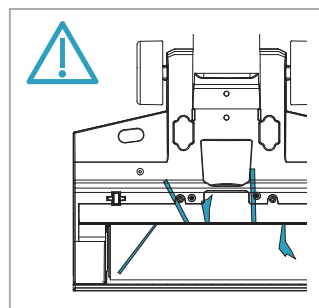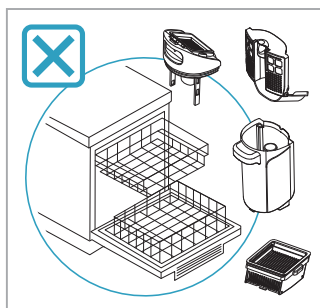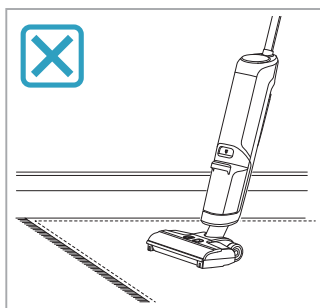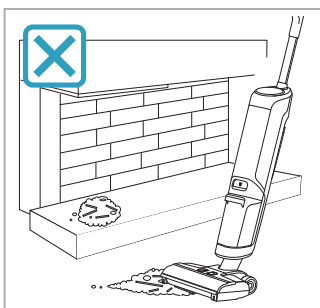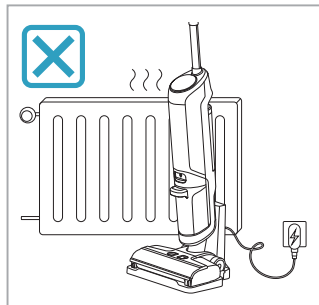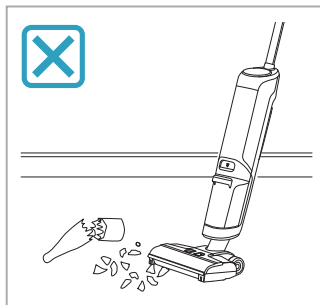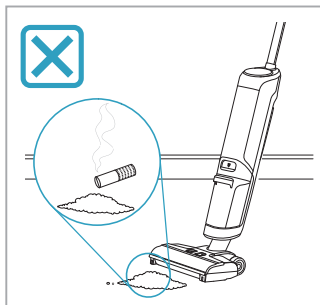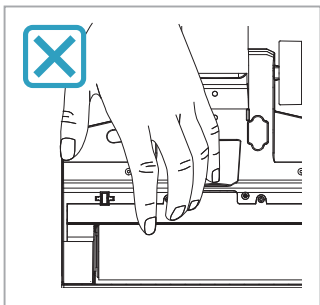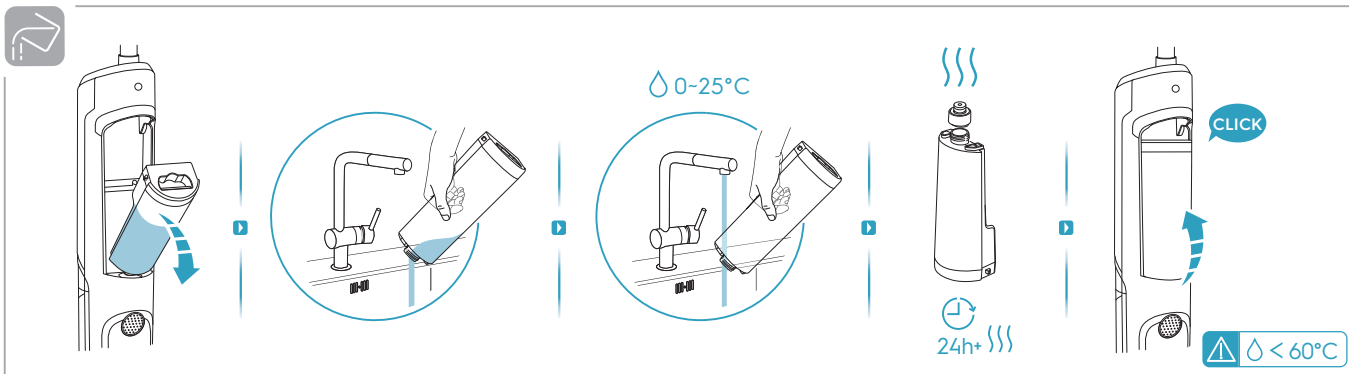          

请关注官方公众号，
获得更多产品信息和售后服务支持

 

4055838546
Detergent
地面清洁液



EF162
Fine Dust Filter
过滤器



4055838538
Brush Roll
绒毛滚刷

